
# **Yealink**

# **MVC-BYOD-Extender**

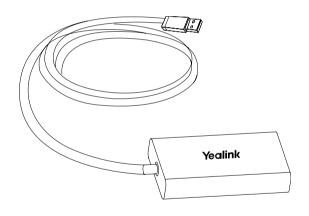

English | 简体中文 | Deutsch | Français | Español

Quick Start Guide (V1.0)

### **Table of Contents**

| English   | . 1 |
|-----------|-----|
| 〕<br>简体中文 | . 3 |
| Deutsch   | .5  |
| Français  | . 7 |
| Español   | . 9 |

## Package Contents



MVC-BYOD-Extender (with 1.5m USB Cable)



7.5m Ethernet Cable 3M Velcrox2






Quick Start Guide

### Installation

Stick the velcros on the back of MVC-BYOD-Extender.

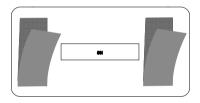


2. Put the MVC-BYOD-Extender on the surface such as table, wall and so on.



### Connection

### Step1: Connect to the UVC camera

- Connect directly to the UVC camera (UVC40)
- Connect to the UVC camera via PoE switch (UVC84)

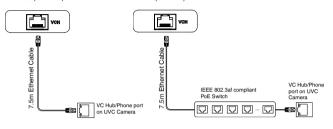

### Step2: Connect to the PC





(带 1.5 米 USB 线)



7.5 米网线




3M 魔术贴 ×2



快速入门指南

1. 将魔术贴贴在 MVC-BYOD-Extender 的背面。

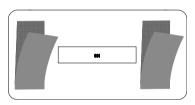


2. 将 MVC-BYOD-Extender 放置在平面上。



# 连接方式

### 步骤 1: 连接至 UVC 摄像机

- 直接连接至 UVC 设备 (UVC40)
- 通过交换机连接至 UVC 设备 (UVC84)

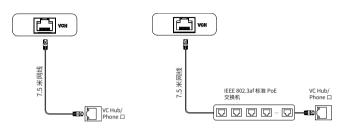

步骤 2: 连接 PC




### Verpackungsinhalt



### Montage

 Befestigen Sie das Klettband an der Rückseite des MVC-BYOD-Extenders.

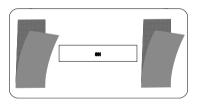


2. Platzieren Sie den MVC-BYOD-Extender auf einer Oberfläche, wie einem Tisch, einer Wand, etc.




# Verbindung

#### Schritt 1: Stellen Sie einen Anschluss zur UVC-Kamera her

- Stellen Sie einen direkten Anschluss zur UVC-Kamera her (UVC40)
- Über PoE-Switch mit der UVC-Kamera verbinden (UVC84)

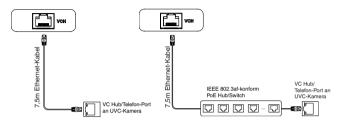

#### Schritt 2: Verbinden mit PC

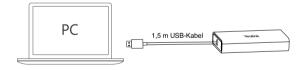

### Contenu de la boîte










MVC-BYOD-Extender (avec câble USB de 1,5 m)

Câble Ethernet 7.5m Velcro 3M x2

Guide de démarrage rapide

### Installation

1. Collez les fixations Velcro à l'arrière de l'extenseur BYOD MVC

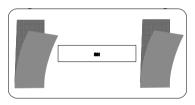


2. Placez l'extenseur BYOD MVC sur la surface (table, mur, etc.).




### Connexion

### Étape 1 : Connecter à la caméra UVC

- Connecter directement à la caméra UVC (UVC40)
- Connecter à la caméra UVC via un commutateur PoE (UVC84)

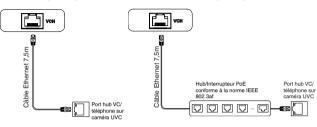

Étape 2 : Connexion à un PC

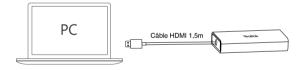

## Contenido de la caja



MVC-BYOD-Extender (Con cable USB de 1,5 m)



Cable Ethernet de 7.5m




Velcro 3M ×2



Guía de inicio rápido

### Instalación

 Pegue los velcros en la parte posterior del MVC-BYOD-Extender.

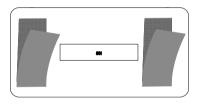


2. Coloque el MVC-BYOD-Extender en una superficie como mesa, pared, etc.




### Conexión

#### Paso 1: Conectar a la cámara UVC

- Conectar directamente a la cámara UVC(UVC40)
- Conectar a la cámara UVC a través del interruptor PoE (UVC84)

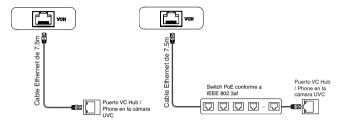

#### Paso 2: Conectar al PC

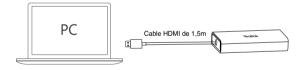

### **Declaration of Conformity**

YEALINK(XIAMEN) NETWORK TECHNOLOGY CO. LTD. Address: 309, 3rd Floor, No.16, Yun Ding North Road

Huli District, Xiamen City, Fujian, P.B.C.

Manufacturer: YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD

Address: 309, 3rd Floor, No.16, Yun Ding North Road,

Huli District, Xiamen City, Fujian, P.R.C.

DATE: 10<sup>th</sup> /Jun/2021 declare that the product

Type: BYOD Extender

Model: MVC-BYOD-Extender

meets the essential requirements and other relevant provisions according to the following EC directive

Directive: 2014/35/FU, 2014/30/FU: Conformity

The product complies with the following standards:

Safety: EN 62368-1:2014/A11:2017 EMC:EN 55032:2015

EN 55035:2017

EN61000-3-2: 2014 EN61000-3-3: 2013

Directive 2011/65/EU and (EU)2015/863 of the European Parliament and of the Council of 8 June 2011 and 4 June 2015 on the restriction of the use of certain hazardous substances in electrical and electronic equipment(RoHS 2.0)

Directive 2012/19/EU of the European Parliament and of the Council of 4.July.2012 on Waste electrical and electronic equipment(WEEE) Regulation (EC) No.1907/2006 of the European Parliament and of the Council of 18.December.2006 on Registration, Evaluation, Authorization, and Restriction of Chemicals (REACH)

NAME: Stone ANN NE TITLE: Vice President

YEALINK (EUROPE) NETWORK TECHNOLOGY B.V. Address: Strawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, the Netherlands Telephone: +31 (0) 64 61 11 373 Email: EUROPE@Yealink.com

#### Regulatory Notices

#### Operating Ambient Temperatures

Operating temperature: +14 to 122°F (-10 to 50°C)

parties, etc., arising from the use of this product.

Relative humidity: 5% to 90%, noncondensing Storage temperature: -22 to +160°F (-30 to +70°C)

Warranty Our product warranty is limited only to the unit itself, when used normally in

accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third

#### Explanation of the symbols

#### DC symbol

- is the DC voltage symbol.
- · WEEE Warning symbol

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic

equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE

#### Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

#### Safety Instructions

Save these instructions. Read these safety instructions before use!

#### ⚠General Requirements

- Before you install and use the device read the safety instructions carefully. and observe the situation during operation.
  - . During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
  - · Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
  - Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.

#### ▲ Environmental Requirements

- . Place the device at a well-ventilated place. Do not expose the device under direct sunlight
- . Keep the device dry and free of dusts
- . Do not place the device on or near any inflammable or fire-vulnerable object, euch ae rubhar-mada materiale
- . Keep the device away from any heat source or bare fire, such as a candle or an electric heater

#### ♠ Operating Requirements

- . Do not let a child operate the device without guidance.
  - . Do not let a child play with the device or any accessory in case of accidental
- «wallowing Please use the accessories provided or authorized by the manufacturer only.
- . The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket
- . Before plugging or unplugging any cable, make sure that your hands are completely d
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a

#### About Yealink

Yealink (Stock Code: 300628) is a global brand that specializes in video conferencing, voice communications and collaboration solutions with best-in-class quality, innovative technology and user-friendly experience. As one of the best providers in more than 140 countries and regions. Yealink ranks No.1 in the global market share of SIP phone shipments (Global IP Desktop Phone Growth Excellence Leadership Award Report, Frost & Sullivan, 2019).

Technical Support Visit Yealink WIKI (http://support.yealink.com/) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (https://ticket.vealink.com) to submit all your technical issues.

- . During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
- . If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug. . When there is smoke emitted from the device, or some abnormal noise or
- smell, disconnect the device from the power supply, and unplyg the power nlug immediately Contact the specified maintenance center for renair
- Do not insert any object into equipment slots that is not part of the product or auxiliary product
- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.
- Cleaning Requirements
  - . Before cleaning the device, disconnect it from the power supply. . Use a piece of soft, dry and anti-static cloth to clean the device.

#### . Keep the power plug clean and dry

Troubleshooting The unit cannot supply power to Yealink device.

There is a bad connection with the plug

- 1. Clean the plug with a dry cloth 2. Connect it to another wall outlet
- The usage environment is out of operating temperature range 1. He in the operation temperature range
- The cable between the unit and the Vealink device is connected incorrectly
- 1 Connect the cable correctly You cannot connect the cable properly
- 1. You may have connected a wrong Yealink device.
- 2. Use the correct power supply. Some dust, etc., may be in the port.
- 1 Clean the nort Contact your dealer or authorized service facility for any further questions.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

#### IC Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause interference; and

(2) this device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3(B) Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux

appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions erihirantae (1) l'appareil ne doit pas produire de brouillage; (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même

si le brouillage est susceptible d'en compromettre le fonctionnement.NMB-3(B)

CO.,LTD.All rights reserved.

Contact Information YEALINK NETWORK TECHNOLOGY CO.,LTD. 309, 3rd Floor, No.16, Yun Ding North Road, Huli District, Xiamen City, Fujian, P.R.C

YEALINK (EUROPE) NETWORK TECHNOLOGY B.V. Strawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherlands

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA Made in China



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD. Web: www.yealink.com Copyright@2021 YEALINK(XIAMEN) NETWORK TECHNOLOGY